

Cable Luber is used to inject lubricant into cable housing.

Instructions

Clamp over housing and inner wire at end of cable. Connect aerosol can through hole on front side of tool. Cable is lubricated once lube runs out opposite end of cable.