

MP 08-0591

**WARNING:** Wear safety glasses and gloves when handling brake fluid. Follow the instructions in your vehicle's workshop manual when removing, disassembling, installing, and bleeding the brake system. **IMPROPER INSTALLATION AND BLEEDING OF THE BRAKE SYSTEM CAN CAUSE YOUR BRAKE SYSTEM TO MALFUNCTION AND RESULT IN SERIOUS BODILY INJURY OR DEATH.**

#### INSTRUCTIONS

#### BRAKE PISTON TOOLS

#### 4. Remove the piston

- Ultra low profile design removes pistons from monobloc disc brake calipers

Motion Pro, Inc.

- Fits pistons with center bore from 15mm to 28mm.

- Easy-to-use single locking screw

Works on aluminum, steel and titanium pistons

- Non-damaging design will not damage pistons or calipers

1. Remove the caliper and brake pads (refer to the workshop manual for proper caliper and brake pad removal).

- Aluminium and stainless steel construction

2. Insert the caliper piston tool into the inside of the piston to be removed.

Durable blue anodized surface

3. Tighten the locking bolt as shown to spread the jaws and securely lock the tool onto the piston.

Environmentally dispose of the product.

Made in CHINA

Importer: MEFO SPORT CENTRUM s.r.o.

Jinín 60, Strakonice 38601, [www.mefo.cz](http://www.mefo.cz)