

## Spark plug

Install and remove when the cylinder head is cool. Always use a spark plug torque wrench that is not too loose and has a soft material between the rings. The tightening torque must be applied perpendicular to the spark plug axis and the wrench must

be fitted the full length of the hexagon of the spark plug housing. When fitting and removing the spark plug to the cylinder head, the

applied to the insulator. Before fitting, check that the spark plug is fitted with a sealing washer and that the cylinder head

the sealing washer from the previous spark plug is not left in the cylinder head. After assembly, check that the cable lugs are perfectly

clamped to the spark plug. If you are not experienced enough, have the spark plug replaced by a qualified service technician.

Dispose of the product environmentally at the end of its service life.

Dealer:

MEFO SPORT CENTRUM s.r.o., Jinín 60,38601 STRAKONICE

[www.mefo.cz](http://www.mefo.cz)